



Accessories and Trim




Not Shown
4 19 21
25 29 30 31

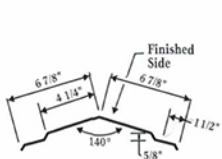


1 14" Universal Ridge Cap

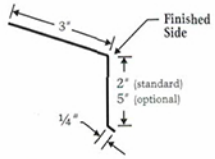


2 Gutter Trim

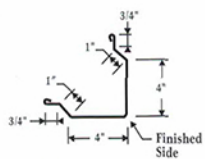


3 Rake & Corner

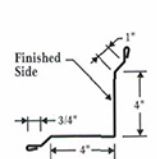


4 Inside Corner

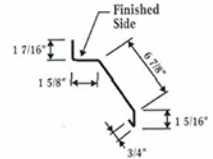


5 Door Track Cover Cannonball

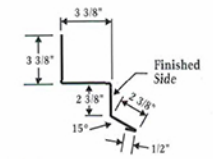


6 Door Track Cover National

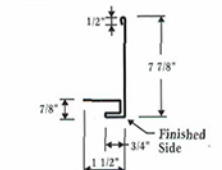


7 Overhead Door Trim

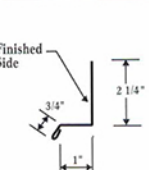


8 Drip Cap

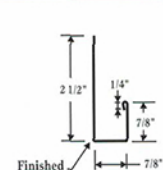


9 J-Channel

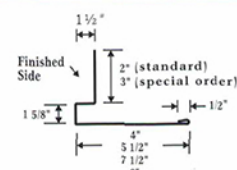


10 Door Jamb Trim

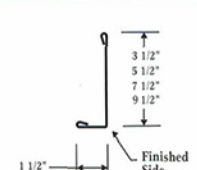


11 Door Post Trim

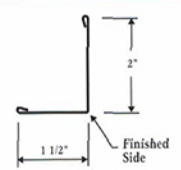


12 Angle Trim

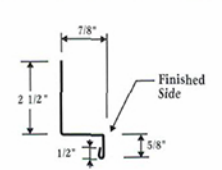


13 Double Angle

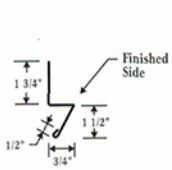


14 Rat Guard

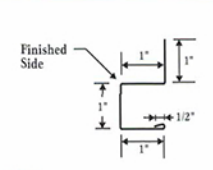


15 Base Trim / Door Guide & Bottom Closure




16 Perforated Panel

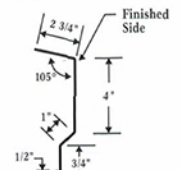


17 Fascia Trim

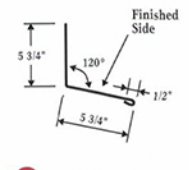


18 Universal Endwall Flashing

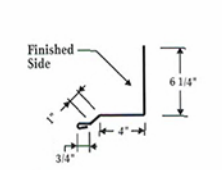


19 Sidewall Flashing

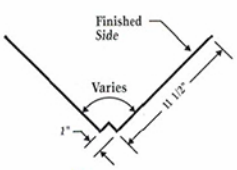


20 W-Valley

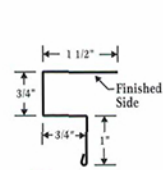


21 Double J

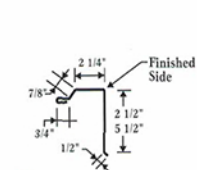


22 Rake & Gable Trim

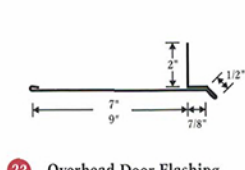


23 Overhead Door Flashing (including Drip Cap)

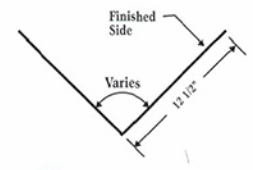


24 Valley Flashing

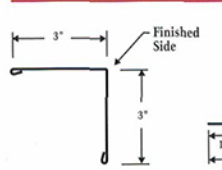


25 Angle Trim

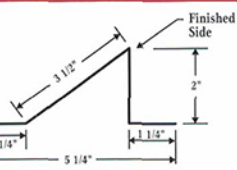


26 Sno Guard

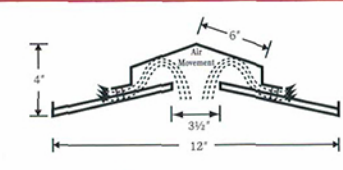


27 Ridge Vent

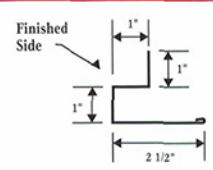


28 Soffit / Eave Channel

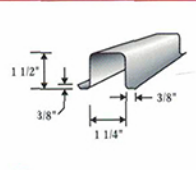


29 Girt (20 g. Galvanized)

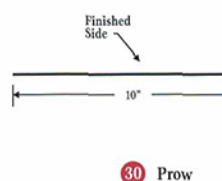


30 Prow

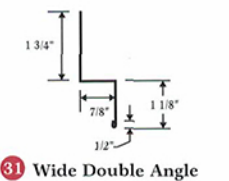


31 Wide Double Angle

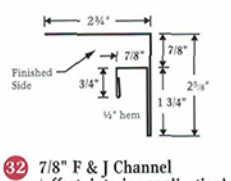

32 7/8" F & J Channel (offset, interior application)

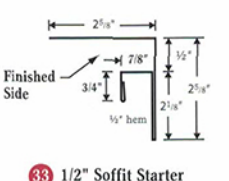

33 1/2" Soffit Starter

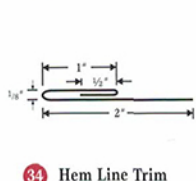

34 Hem Line Trim